


WALL REPAIRS

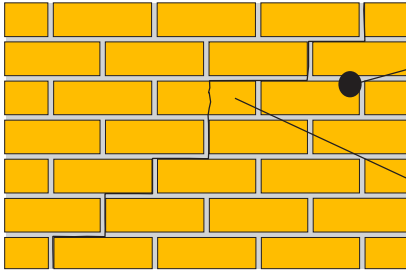


Cracks < 2mm

- Rake out joints and clean thoroughly
- Pack tightly with fresh mortar


Cracked bricks *must* be replaced

Cracks > 2mm

- Remove 2 bricks from either side of the crack
- Rebuild spacing bricks equally to take up crack

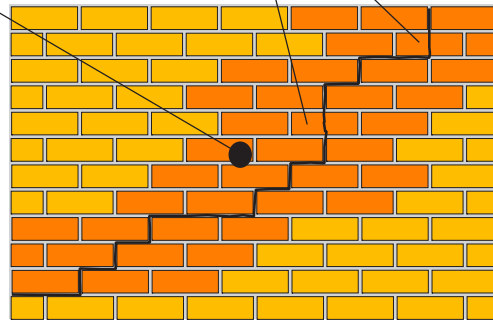

HeliBond MM2 grout

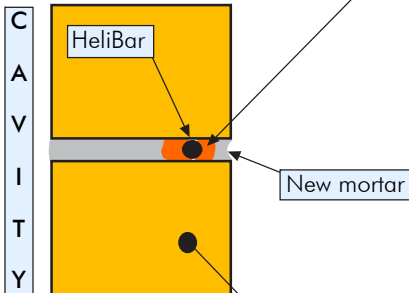

Crack Stitching

- Use HeliBars every 4 to 6 courses
- Rake along joint for a distance of 1000mm to a depth of 35mm (45mm for full brick walls)
- Clean joint and flush with water
- Grout HeliBond MM2 to back of slot
- Push HeliBar rod into grout ensuring good contact
- Inject a further bead of grout
- Cure using moist hessian
- Repoint to match existing

Gladstone House
Main Road
Broughton
CHESTER
CH4 0NR

Tel: 01244-526020
Fax: 01244-526022
Email: info@solutions.gb.com



©

www.solutions.gb.com

- This is intended as a guide only! The Specification for Repairs for the property will be more specific
- Below dpc use 1:¼:4½ mortar mix, above dpc use 1:1:6
- The Contractor is to ensure the property remains stable during all repairs using shoring and other support as necessary
- Repair work should always match the existing
- The Building Inspector will probably want to inspect the works